



Operating modes :

- **Normal** : Battery Breaker on Battery 1 for engine start and Service selection switch on 2.
- **MPPT regulator down** : Move Service selection switch to 1 and Battery breaker to any position but 0.
- **Battery 1 flat on start** : Move Battery breaker to 2
- **System not used** : Battery breaker on 0 and Service selection switch on 2

Enable Starter switch shall be open when the boat is unattended and Battery breaker on any position but 0.